

# Yesterday's Radio 2012

## Packard Parts

Prices subject to change without notice

Item No.	Description	Price
<b>Antenna</b>		
AE01	Antenna Roof Escutcheon Interior 1941 - 50	15.00
AK01	Antenna Knob 1941 - 50	15.00
AM01	Antenna Mount Front 1955 - 56	15.00
AM02	Antenna Mount Rear 1955 - 56	15.00
AM03	Antenna Mount Front 1948 - 50	15.00
AM04	Antenna Mount Roof 1941 - 50	15.00
AM05	Antenna Mount Side 1941 - 42	50.00
AM06	Antenna Mount Side 1940	50.00
AS01	Antenna Stop 1940 - ? with Spring Clip	30.00
UA01	Under-Running-Board Antenna	510.00
<b>Ashtray</b>		
AT01	Ashtray Handle 1940	15.00
AT02	Ashtray Handle 1941 - 47	15.00
AT03	Ashtray Handle Rear 1940 - 41	15.00
AT04	Ashtray Handle 1948 - 50	15.00
AT06	Ashtray Handle Rear Tapered 1940 - 41	15.00
AT07	Ashtray Lid 1940 160 Fluted	50.00
DP03	Ashtray Lid 1941	45.00
DP04	Ashtray Surround 1941	325.00
DP13	Ashtray Lid 1941 - Clipper	45.00
DP14	Ashtray Surround 1941 - Clipper	275.00
<b>Dash Knobs</b>		
DK01	Dash Knob 1941 - 42 with Metal Inserts	25.00
DK01S	Dash Knob Set 1941 - 42 with Metal Inserts	125.00
DK03	Dash Knob 1930 - 31	12.00
LI01	Dash & Lighter Knobs 1940	12.00
TK01	Transmission Knob 1941 - 42 ELECTROMATIC	25.00
TK01	Transmission Knob 1941 - 42 ELECTROCLUTCH	25.00

<b>Item No.</b>	<b>Description</b>	<b>Price</b>
<b>Dash Plastic &amp; Chrome</b>		
DP01	Clock Surround 1941	170.00
DP02	Speedometer Surround 1941	170.00
DP03	Ashtray Lid 1941	45.00
DP04	Ashtray Surround 1941	325.00
DP11	Radio Speaker Grill (Waterfall) 1941	700.00
DP11S	Radio Speaker Grill (Waterfall) 1941	700.00
DP12	Complete Set 1941 Dash Plastic	1400.00
DP13	Ashtray Lid 1941 Clipper	45.00
DP14	Ashtray Surround 1941 Clipper	275.00
DP15	Clock & Speedometer Surround 1941 Clipper ea.	170.00
AT01	Ashtray Handle 1940	15.00
AT07	Ashtray Lid 1940 160 Fluted	50.00
DP05	Clock Plastic Left 1940 160	150.00
DP06	Clock & Speedometer Plastic Ring	50.00
DP07	Clock Plastic Right 1940 160	150.00
DP08	Speedometer Plastic Left 1940 160	175.00
DP09	Speedometer Plastic Right 1940 160	175.00
DP10	Center Dash Plastic 1940 160	300.00
RE04	Radio Escutcheon ( Six Pushbutton) 1940 160	150.00
RE05	Radio Delete Plate 1940 160 Plastic	50.00
RE06	Radio Delete Plate 1940 Chrome	125.00
DS01	Set 1940 160 Plastic & Chrome with Radio Plate	2090.00
	Set 1940 160 Plastic & Chrome with Delete Plate	1990.00
<b>Door Lock</b>		
DL01	Door Lock Pulls 1938 - 54	10.00
<b>Escutcheons</b>		
ES01	Escutcheon 1940 - 42 120 160 Window & Door	10.00
ES02	Escutcheon 1940 - 42 160 180 Window & Door	10.00
ES03	Escutcheon 1940 - 42 160 180 Vent	10.00
ES06	Escutcheon 1951 - 54 Window & Door	10.00
ES07	Escutcheon 1935 Window & Door	25.00
ES08	Escutcheon 1940 Window & Door	10.00
ES09	Escutcheon 1940 vent Window	10.00
GS09	Gear Shift Arm Plastic Coated 1941	175.00

<b>Item No.</b>	<b>Description</b>	<b>Price</b>
<b>Gearshift Knobs</b>		
GS01	Gearshift Knob 1941 2-3/4 Long	45.00
GS02	Gearshift Knob 1939 - 40 2 Long	30.00
GS03	Gearshift Knob 1941 - 54 Round	30.00
GS04	Gearshift Knob 1949 - 51 2-1/4 Long	30.00
GS05	Gearshift 1932 - 35 2-1/8 Dia.	45.00
GS06	Gearshift Knob 1930 - 31 2 Dia.	45.00
GS07	Gearshift Knob 1938 1-15/16 Dia.	45.00
GS08	Gearshift Chrome Trim	20.00
GS09	Gearshift Arm Plastic Coated 1941	175.00
<b>Heater</b>		
HD01	Heater Door Knob 1936 - 39	12.00
HH01	Heater Handle 1940 - 47	15.00
HS01	Heater Switch Bracket 1940	25.00
HS02	Heater Switch Knob 1938 - 39	12.00
HS03	Heater Switch Bracket 1941 - 42	60.00
HS04	Defrost Switch Bracket 1941 - 42	60.00
HS05	Heater Defrost Switch Bracket 1941 - 42	60.00
HS06	Heater Bracket Switch Knob 1941 - 42	30.00
HS07	Cooling Switch Bracket 1941 - 42	60.00
HS08	Switch Bracket Mount	15.00
FK01	Fresh Air Knob 1941 - 42	20.00
FS01	Fresh Air Switch Bracket 1941 - 42	60.00
LS01	Road Lite Switch Bracket 1941 - 42	60.00
HG01	Heater Grill 1941	100.00
<b>Horn Button</b>		
HB01	Horn Button 1939 - 40	60.00
HB03	Horn Button 1941 - 47 Senior	175.00
HB04	Horn Button 1941 - 47 Junior	200.00
HB05	Horn Button 1930	45.00
HB06	Horn Button Contact	25.00
HB07	Horn Button 1931	45.00
<b>Literature</b>		
RM39	Radio Manual 1939 Six Pushbutton	5.00
RM40	Radio Manual 1940 Six Pushbutton	5.00
RM41	Radio Manual 1941 Five Pushbutton	5.00
RM46	Radio Manual 1946 Six Pushbutton	5.00
RMRE	Radio Expert	5.00
NR01	Packard NoRol Brake Accessory	5.00
ST01	Maintaining the Packard Ride	12.00
ST02	A Good Steer on Packard Steering	12.00
ST03	Serving by Selling	12.00

<b>Item No.</b>	<b>Description</b>	<b>Price</b>
<b>Radio</b>		
RD01	Radio Dial 1939 - 40	10.00
RD02	Radio Dial 1937	10.00
RD03	Radio Dial 1938	10.00
RD04	Radio Dial 1941 Clear White Numbers	45.00
RE01	Radio Escutcheon 1939 - 40 Chrome	335.00
RK01	Radio Knob 1938	12.00
RK02	Radio Knob 1939 - 40 Tone/Distance	10.00
RK03	Radio Gland Nut Covers 1939 - 40 Chrome	6.00
RK04	Radio Knob 1941 - 42 Long Clear with Chrome Insert	20.00
RK05	Radio Knob 1942 - 47 Short Clear with Chrome Insert	20.00
RK06	Radio Knob 1942 - 46 - 47 Center Long Shaft	30.00
RK07	Radio 1939 - 40 Gland Nut	10.00
RK08	Radio Knob (Early) Black Hexagon 3/4 x 5/8	10.00
RK09	Radio Knob (Early) Black Hexagon 7/8 x 3/4	10.00
RK10	Radio Knob (Early) Rosette 7/8 Dia.	10.00
RK11	Radio Knob (Early) Rosette 1-1/8 Dia.	10.00
RK12	Radio Knob (Early) Six Flutes 7/8 Dia.	10.00
RK13	Radio Knob 1935 - 36 Chrome Ring	20.00
RK14	Radio Knob (Early) Knurled 1 Dia.	10.00
RL01	Radio Lever 1937 Die Cast Chrome	45.00
RP01	Radio Pushbutton 1941- 42 Adjustable Long style	20.00
RP02	Radio Pushbutton 1942 - 46 - 47 Adjustable Short Style	20.00
RP03	Radio Pushbutton 1939 - 40	10.00
RP04	Radio Pushbutton Caps 1939 - 40 Chrome	18.00
RP06	Radio Curved Pushbutton Caps 1939 Chrome	50.00
RP07	Radio Pushbutton Retaining Plates 1939 - 40	12.00
Key	Philco Radio Key	10.00
OS36	Overhead Radio Speaker 1936	125.00
OS37	Overhead Radio Speaker 1937	125.00

#### **Window Crank Knobs**

WC01	Window Crank Knob 1938	12.00
WC02L	Window Crank Knob 1939 - 40 (.297 Shaft Size)	12.00
WC02S	Window Crank Knob 1939 - 40 (.201 Shaft Size)	12.00
WC03	Window Crank Knob 1940 - 42 Chrome Target and Base	40.00
WC04	Window Crank Shafts .201 or .228 Dia.	10.00
WC05	Window Crank Knob 1940 - 42	12.00
WC06	Window Crank Knob 1941 - 54	15.00
WC07	Window Crank Knob 1951 - 54	15.00
WC08	Window Crank Knob 1935	20.00
WC09	Window Crank Knob 1935 (Vent)	20.00
WC10	Window Crank Knob 1930	20.00

#### **Wiper**

WI01	Wiper Knob 1941 - 47	10.00
WI02	Wiper Knob( Early)	10.00
WI03	Wiper Knob 1941 - 47	10.00
WN01	Wiper Knob Nut 1941 Chrome	10.00

<b>Item No.</b>	<b>Description</b>	<b>Price</b>
<b>Miscellaneous</b>		
CK01	Convertible Knob 1948 - 54	60.00
DB01	Front Door Bumper 1938 - 42 Pair	20.00
OD01	Overdrive Knob 1941 - 50	30.00
RR01	Robe Rail Escutcheon 1941	15.00
SK01	Steering Post Control Knob 1930-31	12.00
SR01	Steering Ring Trim 1930 - 31	12.00
TP01	Toe Plate 1939 - 42 Polyurethane	45.00
TS01	Turn Signal Arm Plastic 1942 -54	15.00
TW01	Teflon Handle Washers Interior 4 Pack	5.00
TW02	Teflon Handle Washers Exterior 4 Pack	5.00
VH01	Vent Handle 1940 - 47	25.00
AH01	Assist Handle (Rear) 1946 - 47 Limo	15.00
AH02	Assist Handle 1930	15.00
WT01	Window Frame Trim 1941 - 160	15.00

Phone, write or email for free Yesterday's Radio Catalog  
[jerry@yesterdaysradio.com](mailto:jerry@yesterdaysradio.com)  
 Phone 216 - 524 - 2018

